

LiquiPro™ DI

PES Membrane Cartridge Filters



Superior filters made of high quality PES (Polyethersulfone) membrane with low pressure drop, high flow rate and long service life for direct DI water, TMAH developer, weak acids and base solutions.

Features and Benefits

- Optimised mirrored asymmetric PES membrane structure and support materials that ensure low pressure drop, high flow rate and long service life.
- Permanent hydrophilic membrane without the use of additives, surface modification agents or post-treatments to ensure purity performance is not compromised.
- Certificate of quality enclosed with each lot of product for quality assurance that ensures filter-to-filter, lot-to-lot performance.
- High purity application filters with double-bag packaging and manufactured in clean room environment.
- 100% virgin polypropylene support material construction without the use of binders, adhesive or surfactants to ensure purity performance is not compromised.
- Fast rinse up time as filters has been pre-flushed with Ultrapure DI water (18.2 Megaohm-cm, TOC less than 40ppb).

Typical Applications

- General direct DI and recirculation DI water bath applications.
- Direct DI Water application for fat panel display manufacturing.
- Direct DI water application for solar and wafer bumping.
- Recommended for TMAH 2.38%.

Performance Specifications

Pore size rating

0.05, 0.1, 0.2, 0.45, 1.2µm

Maximum differential pressure:

5.39 bard (78 psid) @20°C (68°F)

1.7 bard (24psid) @80°C (176°F)

Recommended change-out differential pressure

2.0 bard (30 psid)

Compatibility and purity

Filters do not use any binders, surfactants and adhesives for broad usage compatibilities.

Materials of construction


Filter media: Polyethersulfone (PES)

Support: Polypropylene


End caps, core, cage: Polypropylene

O-rings: EPDM, FKM and E-FKM


Flow Rates: LiquiPro™ DI (DG) 222 series

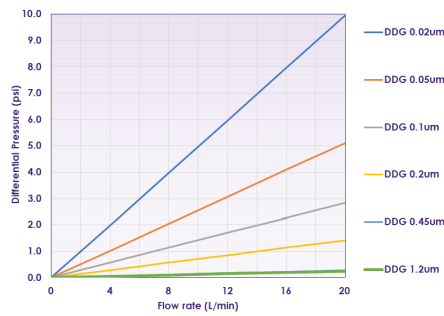

Flow Rates: LiquiPro™ DI (DGX) 222 series

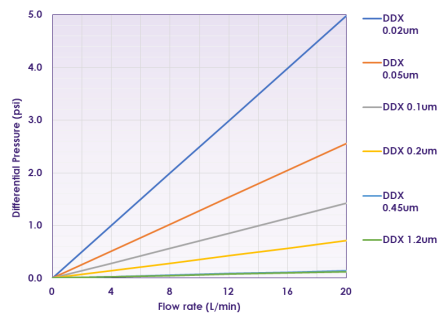

Flow Rates: LiquiPro™ DI (DGXW) 226 series

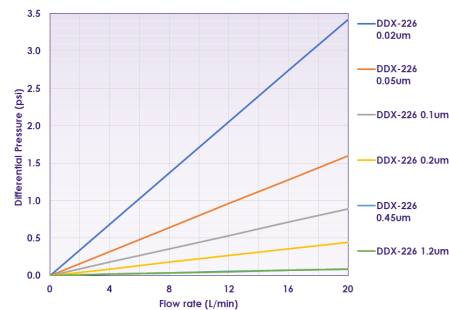

*Flow rate is for water at 20°C through a 10 in cartridge. For liquids other than water, multiply differential pressure by fluid viscosity (cP).

Ordering Information

To form a part number, please choose one option from each column below.

Product Name	Micron Rating	Adaptor Code	Seals	Diameter	Length	Key Option
DG: LiquiPro™ DI (Standard)	005: 0.05µm	A : 222/flat	E: EPDM	A: 70mm	05: 5in	- : N/A
DGW: LiquiPro™ DI (226mm dia)	010: 0.1µm	K: 226/flat	T: E-FKM	B: 80mm	10: 10in	
DGX: LiquiPro™ DI (Xtra life)	020: 0.2µm	M: DOE	V: FKM	C: 130mm	20: 20in	
DGXW: LiquiPro™ DI (Xtra life 226mm dia)	045: 0.45µm	R: 334/flat	S: Silicone		30: 30in	
DGU: LiquiPro™ DI (ultra life)	120: 1.2µm	J: 213 internal			40: 40in	
DGUW: LiquiPro™ DI (ultra life 226mm dia)						

Diameter	Code
222 (10in)	Dia 70mm = 266 +/- 2
222 (20in)	Dia 70mm = 506 +/- 4
222 (30in)	Dia 70mm = 750 +/- 4
226 (10")	Dia 70mm = 226 +/- 2
226 (10")	Dia 80mm = 245 +/- 2
213 (20")	Dia 70mm = 494 +/- 4

Customer to specify length if different from the above.



Porvair Filtration Group Ltd.
Queensway
Stem Lane, New Milton,
Hampshire, BH25 5NN, UK
Tel: +44 (0)1425 612010
Email: info@porvairfiltration.com

Porvair Filtration Group Inc.
1226 Caldwell Blvd.
Nampa, Idaho 83651, USA
Tel: +1 208 461 2090
Fax: +1 208 461 5794
Email: infoUS@porvairfiltration.com

www.porvairfiltration.com

Porvair Filtration Group
Chengdong Area
Square Industrial Park, North District
Xiaonan Economic Development
Zone
Xiaogan, 432000, China
Tel: +86 25 5758 1600
Sales: +86 151 0101 2510
+86 189 3686 6188
Email: infoCN@porvairfiltration.com

Porvair Filtration India PVT. Ltd.
Gangotri Glacier Annex, Kavesar
Opposite Vijay Nagari, Off Ghod-
bunder Road
Thane (W), 400607, India
Tel: +91 22 25 976464
+91 22 25 976465
Email: infoIN@porvairfiltration.com

Porvair is a registered trademark of Porvair plc.

LiquiPro is a trademark of Porvair Filtration Group.

© Copyright 2020, Porvair Filtration Group Ltd. All rights reserved.

Whilst every effort has been made to ensure the accuracy of this document, due to continuous product development, the data contained is subject to constant revision and Porvair Filtration Group Ltd. reserves the right to change, alter or modify its contents.