

LiquiPro™ PH

UHP Hydrophilic PVDF Membrane Filter



LiquiPro™ PH is a proprietary high-performance hydrophilic PVDF membrane with high efficiency and high capacity to remove particles and microorganisms.

Features and Benefits

- Optimised high-flow hydrophilic PVDF membrane structure and support materials that ensure high particle retention efficiency along with low pressure drop, high flow rate and long service life.
- Permanent hydrophilic membrane without the use of additives, surface modification agents or post-treatments to ensure purity is not compromised.
- Certificate of quality enclosed with each lot of product for quality assurance that ensures filter-to-filter, lot-to-lot performance.
- High purity application filters manufactured in clean room environment.
- Fast rinse up time as filters has been preflushed with Ultrapure DI water (18.2 Megaohm-cm, TOC less than 15ppb).

Typical Applications

- Ultrapure DI water facilities.
- Dilute acids and DI water cleaning bath in semiconductor wafer fabs.
- Detergent, DI water cleaning bath in hard disk, media and substrate manufacturing.
- Cleaning and rinsing processes in the photo-electric and flat panel display.
- Point of use food and beverage filtration.

Performance Specifications

Pore size rating

0.1, 0.2, 0.45µm

Maximum differential pressure:

5.39 bard (78 psid) @ 20°C (68°F)

1.7 bard (24psid) @ 80°C (176°F)

Recommended change-out differential pressure

2.0 bard (30 psid)

Compatibility and purity

Filters do not use any binders, surfactants and adhesives for broad usage compatibilities. Only 100% virgin polypropylene is used.


Food, Drug and Water Contact Use

Meets the requirement of the FDA Title 21 of the Code of Federal Regulations. Comply with EU Directive 2002/72/EC for plastic in food contact.

Materials of construction

Filter media: Hydrophilic PDVF membrane with PET support
 Support: Polypropylene
 End caps, core, cage: Polypropylene
 O-rings: EPDM, Viton®, Silicone, Buna-N, PTFE encap. Viton®, Polyethylene

Flow Rates: LiquiPro™ PH series

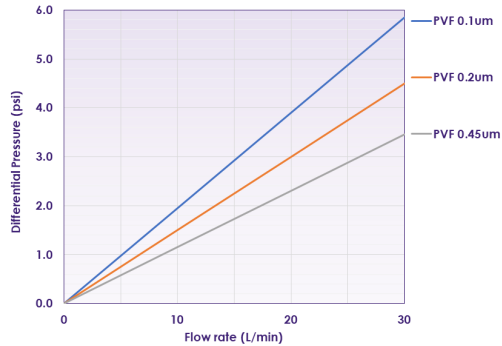

* Flow rate is for a 25.4 cm (10 in) cartridge. For liquids other than water, multiply differential pressure by fluid viscosity (cP).

Ordering Information

To form a part number, please choose one option from each column below.

Product Name	Micron Rating	Adaptor Code	Seals	Cleanliness	Length	Key Option
PV: LiquiPro™ PH	010: 0.1µm	A : 222/flat	T: E-FKM	S : Class 100 Cleanroom	05: 5in*	- : N/A
	020: 0.2µm	C: 222/fin	E: EPDM	E: E Grade TOC <50ppb	10: 10in	
	045: 0.45µm	K: 226/flat	V: FKM	U: Ultra High Purity <40ppb	20: 20in	
		B: 226/fin	S: Silicone			
		M: DOE				

* Non standard request.

Diameter	Code 0	Code M
10 = 10in (Dia: 80mm)	Code 0 = 266mm ± 2	Code M = 254mm ± 2 default. Customer must specify length
20 = 10in (Dia: 80mm)	Code 0 = 506mm ± 4	Code M = 508mm ± 2 default. Customer must specify length
05 = 5in (Dia: 70mm)	Code 0 = 130mm ± 2	



Porvair Filtration Group Ltd.
Queensway
Stem Lane, New Milton,
Hampshire, BH25 5NN, UK
Tel: +44 (0)1425 612010
Email: info@porvairfiltration.com

Porvair Filtration Group Inc.
1226 Caldwell Blvd.
Nampa, Idaho 83651, USA
Tel: +1 208 461 2090
Fax: +1 208 461 5794
Email: infoUS@porvairfiltration.com

www.porvairfiltration.com

Porvair Filtration Group
Chengdong Area
Square Industrial Park, North District
Xiaonan Economic Development
Zone
Xiaogan, 432000, China
Tel: +86 25 5758 1600
Sales: +86 151 0101 2510
+86 189 3686 6188
Email: infoCN@porvairfiltration.com

Porvair Filtration India PVT. Ltd.
Gangotri Glacier Annex, Kavesar
Opposite Vijay Nagari, Off Ghod-
bunder Road
Thane (W), 400607, India
Tel: +91 22 25 976464
+91 22 25 976465
Email: infoIN@porvairfiltration.com

Porvair is a registered trademark of Porvair plc.

LiquiPro is a trademark of Porvair Filtration Group.

© Copyright 2020. Porvair Filtration Group Ltd. All rights reserved.

Whilst every effort has been made to ensure the accuracy of this document, due to continuous product development, the data contained is subject to constant revision and Porvair Filtration Group Ltd. reserves the right to change, alter or modify its contents.